

Information sheet first login and license activation IAF-240

■ First login (password change)

To help prevent undesired access to the device, it is imperative that you change the default password during initial setup.

- ☐ Connect your setup PC to one of the LAN interfaces (ETH2 - ETH4). Assign your setup PC the IP address 192.168.1.100/24 and log in to the graphical user interface at <https://192.168.1.1>.
- ☐ Follow the first time login wizard to set up the device and change the default password.

Note: If you lost your password, then reset the device to factory settings using the Command Line Interface via the Reset button or the Serial port.


■ License activation

The device is shipped with a pre-installed software license. The software license requires activation after the initial device setup. There is a 30-day period for successful software license activation after the first boot of the device.

- ☐ Open the graphical user interface.
- ☐ Navigate to System > License.
- ☐ Choose “Online Activation” in case your device is connected to the Internet or “Offline Activation” otherwise.

For “Offline Activation”, perform the following work steps:

- ☐ Note the displayed entitlement ID and device ID.
- ☐ On an Internet capable PC, navigate to:
<https://www.belden.com/software-activation>
- ☐ Log in using the entitlement ID and provide your e-mail user identification.
- ☐ Activate the software license by entering the device ID.
- ☐ The license file is sent to the given e-mail address or can be downloaded directly
- ☐ Install the license file via the “Offline Activation” dialog in the graphical user interface.

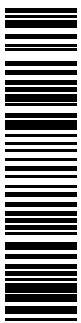

600056001010825000